

King Air GT Seat Application Chart

GT P/N	LH OR RH	SEAT FACING	SEATBACK RECLINE	INBOARD ARMREST	OUTBOARD ARMREST	HEAD REST	NO OPTIONS	W/ ARMRAILS
32-0436	RH	FWD		X	X			
32-0437	LH	FWD		X	X			
32-0442	RH	FWD		X				X
32-0443	LH	FWD		X				X
32-0450	RH	AFT		X	X	X		
32-0451	LH	AFT		X	X	X		
32-0452	RH	AFT		X		X		X
32-0453	LH	AFT		X		X		X
32-0458	RH	FWD					X	
32-0459	LH	FWD					X	
32-0460	RH	FWD		X	X	X		
32-0461	LH	FWD		X	X	X		
32-0462	RH	FWD				X		
32-0463	LH	FWD				X		
32-0464	RH	FWD					X	X
32-0465	LH	FWD					X	X
32-0466	RH	FWD		X		X		X
32-0467	LH	FWD		X		X		X
32-0468	RH	FWD				X		X
32-0469	LH	FWD				X		X
32-0470	RH	FWD	X	X	X	X		
32-0471	LH	FWD	X	X	X	X		
32-0474	RH	FWD	X	X		X		X
32-0475	LH	FWD	X	X		X		X
32-0476	RH	AFT				X		
32-0477	LH	AFT				X		
32-0478	RH	AFT				X		X
32-0479	LH	AFT				X		X
32-0480	RH	FWD/AFT		X	X	X		
32-0481	LH	FWD/AFT		X	X	X		
32-0482	RH	FWD/AFT				X		
32-0483	LH	FWD/AFT				X		
32-0484	RH	FWD/AFT		X		X		X
32-0485	LH	FWD/AFT		X		X		X
32-0486	RH	FWD/AFT				X		X
32-0487	LH	FWD/AFT				X		X